

Cloud 36-50 Jumper Settings



Ref	Description	Default	Location	Notes
J1	Phantom Power	ON		
J2	Bypass Zone 1 mic access terminal	ON		
J3	Bypass Zone 2 mic access terminal	ON		
J4	Bypass Utility mic access terminal	ON		
J5	Zone 1 65 Hz high pass filter	OFF*		
J6	Zone 1 source select (FR or SW)	SW		
J7	Zone 2 source select (FR or SW)	SW		
J8	Zone 2 65 Hz high pass filter	OFF*		
J9	Utility 65 Hz high pass filter	OFF*		
J10	Utility source select (Zone 1, Line 1 or Zone 1 slave)	Zone 1		
J11	Line 6 priority release time (3s, 6s or 12s)	3s		
J12	Zone 1 Line 6 priority	OFF		
J13	Zone 2 Line 6 priority	OFF		

General Notes:

* Note that if the 36-50 is fitted with a 100V/70V line module CXL-3120, the default setting for jumpers J5, J8 and J9 is ON

Cloud Electronics Limited
 140 Staniforth Road, Sheffield, S9 3HF. England
 Telephone: +44 (0)114 244 7051 Fax: +44 (0)114 242 5462
 Web: www.cloud.co.uk E-mail: info@cloud.co.uk

Cloud Electronics USA
 2065 Sidewinder Drive, Suite 200, Park City,
 Utah 84060. United States of America.
 Toll Free: 0855 810 0161
 Web: www.cloudusa.pro E-mail: sales@cloudusa.pro