

Cloud 24-120 & 24-240 Jumper Settings



Ref	Description	Options	Default	Location	Notes
J1	Utility output music source	Z1 / L1	Z1	Main Board	
J2	Music Mute N/O or N/C	N/O / N/C	N/O	Main Board	
J3	Facility port audio routing	Z1 / ALL	Z1	Main Board	Routes Facility audio to Zone 1 only or both zones
J4	Mic over facility priority	EN / DIS	DIS	Main Board	
J5	Zone 1, source (force front panel)	SW / FR	SW	Main Board	Set to FR when using a RL-1
J6	Zone 1, remote port type	RSL-4 / RSL-6	RSL-4	Main Board	
J7	Zone 2, source (force front panel)	SW / FR	SW	Main Board	Set to FR when using a RL-1
J8	Zone 2, remote port type	RSL-4 / RSL-6	RSL-4	Main Board	
J9	Phantom power enable	ON / OFF	OFF	Mic Input	+12V phantom power
J10	APD enable		Fitted	Main Board	Remove to enable APD mode
J11	Zone 1, Line 4 priority	EN / DIS	DIS	Main Board	Enable Line 4 priority in Zone 1
J12	Zone 2, Line 4 priority	EN / DIS	DIS	Main Board	Enable Line 4 priority in Zone 2
J13	Factory use only		Absent	Main Board	Factory use only
J14	Factory use only		Absent	Main Board	Factory use only
J15	Factory use only		Absent	Main Board	Factory use only

General Notes:

- All power to the unit must be removed before removing the top panel
- All jumpers in a set must be moved together

Cloud Electronics Limited

140 Staniforth Road, Sheffield, S9 3HF. England
 Telephone: +44 (0)114 244 7051
 Web: www.cloud.co.uk E-mail: info@cloud.co.uk

Cloud Electronics USA

1960 Sidewinder Drive, Suite 211, Park City,
 Utah 84060. United States of America.
 Tel: +1 435 640 2474
 Web: www.cloudusa.pro E-mail: sales@cloudusa.pro