

Cloud CX261 Jumper Settings



Ref	Description	Default	Location	Notes
J1	Mic 1 phantom power	OFF	Rear right: Lower PCB	
J2	Mic 2 phantom power	OFF	Rear right: Upper rear PCB	
J3	Line 6 priority release time	3s	Centre: Lower PCB	
J4	Mono / Stereo	STEREO	Rear centre: Lower PCB	
J5(A&B)	Line 6 priority	OFF	Centre: Lower PCB	
J6	Mic 1 access contact bypass	ON	Rear left: Upper rear PCB	
J7	Mic 2 access contact bypass	ON	Rear left: Upper rear PCB	
J8	MOH source select	SEL	Centre left: Lower PCB	
J9	Music Mute NO or NC	NO	Rear left: Upper rear PCB	
J10	Mic 1 over Mic 2 priority	OFF	Front centre: Lower PCB	
J11	Mic 1 priority trigger	AVO	Front left: Lower PCB	
J12	Mic 2 priority trigger	AVO	Front centre: Lower PCB	
J13	Mic over music priority trigger	ON	Front left: Lower PCB	
J14	Remote source selection	SW	Rear left: Upper rear PCB	
J15	Music limiter threshold	0dBu	Front left: Lower PCB	
J16	600 Ohm TEL input impedance	ON	Rear right: Lower PCB	

General Notes:

- All power to the unit must be removed before removing the top panel

Cloud Electronics Limited

140 Staniforth Road, Sheffield, S9 3HF. England
 Telephone: +44 (0)114 244 7051 Fax: +44 (0)114 242 5462
 Web: www.cloud.co.uk E-mail: info@cloud.co.uk

Cloud Electronics USA

2065 Sidewinder Drive, Suite 200, Park City,
 Utah 84060. United States of America.
 Toll Free: 0855 810 0161
 Web: www.cloudusa.pro E-mail: sales@cloudusa.pro